



Maxi Dispenser Instruction Booklet

For future reference, keep this
booklet inside your dispenser

FOR ENQUIRIES CALL:

New Zealand – 0800 75 75 78

Australia – 1800 243 500

South Africa - 0861 ECOMIST

Korea - 080 918 5100

Philippines - 02 687-2161



Ecomist Maxi Instructions For Use

Your Ecomist Maxi Dispenser kit contains:

- 1 x Ecomist Computerised Maxi Aerosol Dispenser
- 3 x AA type Alkaline batteries
- Screws for installation of dispenser onto plaster board.
- Instructions

(Note: Aerosol can of choice sold separately)

Installation

- Install in a location where air currents will circulate the aerosol spray to areas where it is most required.
- Mount dispenser at least 2 meters above the floor preferably where there is a clear area between the dispenser and the floor.
- **DO NOT** install near or next to an open window or extractor fan.
- **DO NOT** install near sources of ignition (aerosols are flammable).
- **DO NOT** install dispenser where product will spray directly on humans, pets, exposed food, food preparation areas or food utensils.

Caution: Do not install over appliances or furniture, e.g. refrigerators, items made of plastic or polished surfaces. Ensure adequate ventilation and airflow as excessive inhalation or exposure may cause respiratory and/or skin irritation

Mounting Dispenser

- To open dispenser separate the front cover from the back plate by pressing on the bottom of the dispenser and pulling apart gently.
- Fix back plate to wall with screws provided.

Batteries

Alkaline batteries must be used to ensure correct & long life operation of dispenser.

- Make sure spray on/off switch is in OFF position.
- Install the 3 Alkaline type AA batteries. Ensure that the battery polarities are correct as shown in dispenser.

How to Replace the Aerosol Can

- Make sure the spray on/off switch is 'OFF'.
- Remove old aerosol can by unscrewing anti-clockwise.
- Remove spray nozzle from the top of the new aerosol can.
- Screw the can into the solenoid valve clockwise until finger tight ensuring a complete seal. **Do not over-tighten.**
- Face the dispenser away from you and switch the spray switch 'ON'.

Caution: If accidentally sprayed in eyes
flush immediately with water.

Setting up and Programming your Maxi Dispenser

The Ecomist Maxi Dispenser has flexible programming options to suit your every need. Select the program that suits your environment using the 8 small switches on the PCB (programmable control board).

There are two main modes of operation – continuous and limited time operation.

The factory supplied setting is for continuous operation with a can life of approximately one month.

General Set Up

- Insert batteries in to the dispenser.
- Do not switch the dispenser on until set-up is complete to prevent being sprayed while setting up.
- Set the clock using the DAY, HOUR and MINUTE buttons. The clock is in 24 hour format e.g 4.40pm set as 16.40.
- If the screen switches off press RESET to activate.

LIMITED TIME OPERATION

In this mode the dispenser will operate for a limited number of hours when required. It can be set to operate for 9, 12, 14 or 16 hours per day, for 5, 6 or 7 days per week. The start time is selected as required.

To Set Limited Time And Day Operation

Ensure that the clock has been set up (see General set-up).

- Set switch 1 on
- Select operating hours using switches 2 & 3
 - 9 hour day 2 off – 3 off

2	3
---	---
 - 12 hour day 2 on – 3 off

2	3
---	---
 - 14 hour day 2 off – 3 on

2	3
---	---
 - 16 hour day 2 on – 3 on

2	3
---	---
- Select the number of days to operate using switches 4 & 5
 - 5 days per week 4 off – 5 off

4	5
---	---
 - 6 days per week 4 on – 5 off

4	5
---	---
 - 7 days per week 4 on – 5 on

4	5
---	---
- Select the dispense quantity using switches 6 & 7
 - Low 6 off – 7 off

6	7
---	---
 - Medium 6 on – 7 off

6	7
---	---
 - High 6 on – 7 on

6	7
---	---

Switch 8 is not used.

To select **start day and time**:

- Hold down RESET for 2 seconds until date and time are flashing.
- Set the start time and day in the same way as the clock was originally set – the dispenser will operate for the selected number of days from the start day (e.g Monday for 5 days).
- Point the dispenser away from yourself.
- Switch the spray on/off switch to 'ON' and hold RESET for 2 seconds. The screen will display the expected can life of this setting in days and the dispenser will spray once.
- Your dispenser will now be ready for automatic operation.

For more information contact your local Ecomist distributor or visit our website

New Zealand: www.ecomist.co.nz
Australia: www.ecomist.com.au
South Africa www.ecomist.co.za
Korea: www.ecomist.co.kr

ECOMIST®
Enhancing your Environment

CONTINUOUS OPERATION

Continuous operation has 3 settings tailored mainly to controlling insects.

1. **Standard setting** – dispenser runs from 6:00 to 22:00 before moving to night mode, where a reduced amount is dispensed.
2. **Regular** – dispenser runs continuously at the same frequency for 24 hours per day.
3. **Outdoor** – dispenser runs on a higher setting for control of outdoor insects. Warning the high setting for outdoor should only be used for a short period to clear insects from an area. A refill can will last 1 - 5 days on this setting.

To Set Continuous Operation:

- Make sure the spray on/off switch is turned 'OFF'
- Set switch 1 to off position
- Select setting using switches 2 & 3
 - **Standard** 2 off – 3 off

2	3
---	---
 - **Regular** 2 on – 3 off

2	3
---	---
 - **Outdoor** 2 on – 3 on

2	3
---	---
- Select output using switches 4 & 5
 - **Low** 4 off – 5 off

4	5
---	---
 - **Medium** 4 on – 5 off

4	5
---	---
 - **High** 4 on – 5 on

4	5
---	---

Switches 6, 7 & 8 are not used on this setting.

- Point the dispenser away from yourself.
- Switch the spray on/off switch to 'ON'. Press and hold RESET button for 2 seconds, then release. The screen will display the expected can life in days and the dispenser will spray once.
- Your dispenser will now be ready for automatic operation.